

# CASITA CANOPY TENTS™ 10FT CLASSIC

OUTDOOR BANNER STAND  
PRODUCT CODE: CAS-CST10



on frame on graphic



## PRODUCT DESCRIPTION

Our Casita Canopy Tents™ are an excellent way to provide shade during outdoor and indoor events. These canopies are a standard 10' x 10' size and are available in custom dye-sub print, which has a high quality finish with vivid color. Set up is quick, easy, and user friendly. Telescopic legs snap into place offering a range of heights. This classic system included a protective dust cover to use while in storage.

DISPLAY DIMENSIONS	118.75"W x 135"H x 118.75"D
MIN. HEIGHT	99"H
MAX. HEIGHT	133"H
LOWEST SETTING TO PEAK	120.25"H
FLOOR TO LOWEST SETTING	22"H
GRAPHIC SIZE	118.75"W x 91.25"H

## GRAPHIC MATERIAL

Tent Fabric

## GRAPHIC FINISHING

Hemmed around sides.

## DISPLAY CONSTRUCTION

Aluminum frame (Hex leg thickness: 50mm)

## SHIPPING WEIGHTS & DIMENSIONS

Shipping Weight	36 lbs (frame only) 46 lbs (frame and graphic)
Shipping Dimensions	62"L x 10"W x 10"H (over size)

## LARGE QUANTITY FREIGHT

Freight Shipping	16 boxes per 48"L x 40"W x 67"H skid
Freight Weight	621 lbs (frame only) 781 lbs (frame & graphic)

 
## GRAPHIC TURN AROUND TIME

4 business days after proof approval

## AVAILABLE ACCESSORIES

Rope	Sand Bag
Stakes	La Caja Hard Case
Flag Holder	Travel Bag Wheels

AVAILABILITY	CA Only
WIND RATING	20 mph



Stakes  
(option)



Optional Sand Bag



Rope  
(option)



Travel Bag w/wheels  
(option)



Nylon Travel Bag



Optional La Caja Hardcase

## PARTS LIST



(qty 1) Canopy Frame



(qty 1) Travel Bag

# CASITA CANOPY TENTS™ 10FT CLASSIC

OUTDOOR BANNER STAND

PRODUCT CODE: CAS-CST10

## SET UP INSTRUCTIONS

(5FT CANOPY SHOWN BELOW)

### Step 1

Take your frame and slightly expand it open to expose the corner bars.



### Step 2

Take your canopy graphic and place it on top of the frame.



 
### Step 3

Adhere each corner of the canopy to each corner of the frame. Inside each corner of the canopy, there is a strip of loop Velcro sewn to it and each corner of the frame has a strip of hook Velcro.



### Step 4

With the canopy securely in position, expand the frame until the corner latches lock into place.

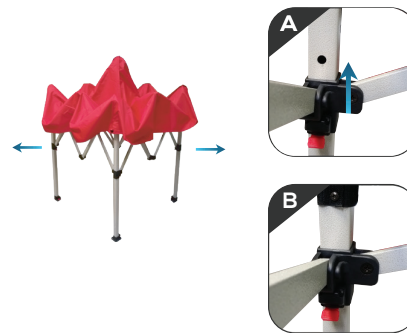

### Step 5

Increase the height by extending the lower legs.



### Step 6

Pull each leg down until the latch locks into place.



### Step 7

Locate the spindle under the canopy, in the middle of the frame. Pull the lever out and rotate to extend the upper peak pole. The dome cap will push out the canopy creating tension to flush out any loose areas.



### Step 8

The install is complete.

